


7-2. EXPLODED VIEWS

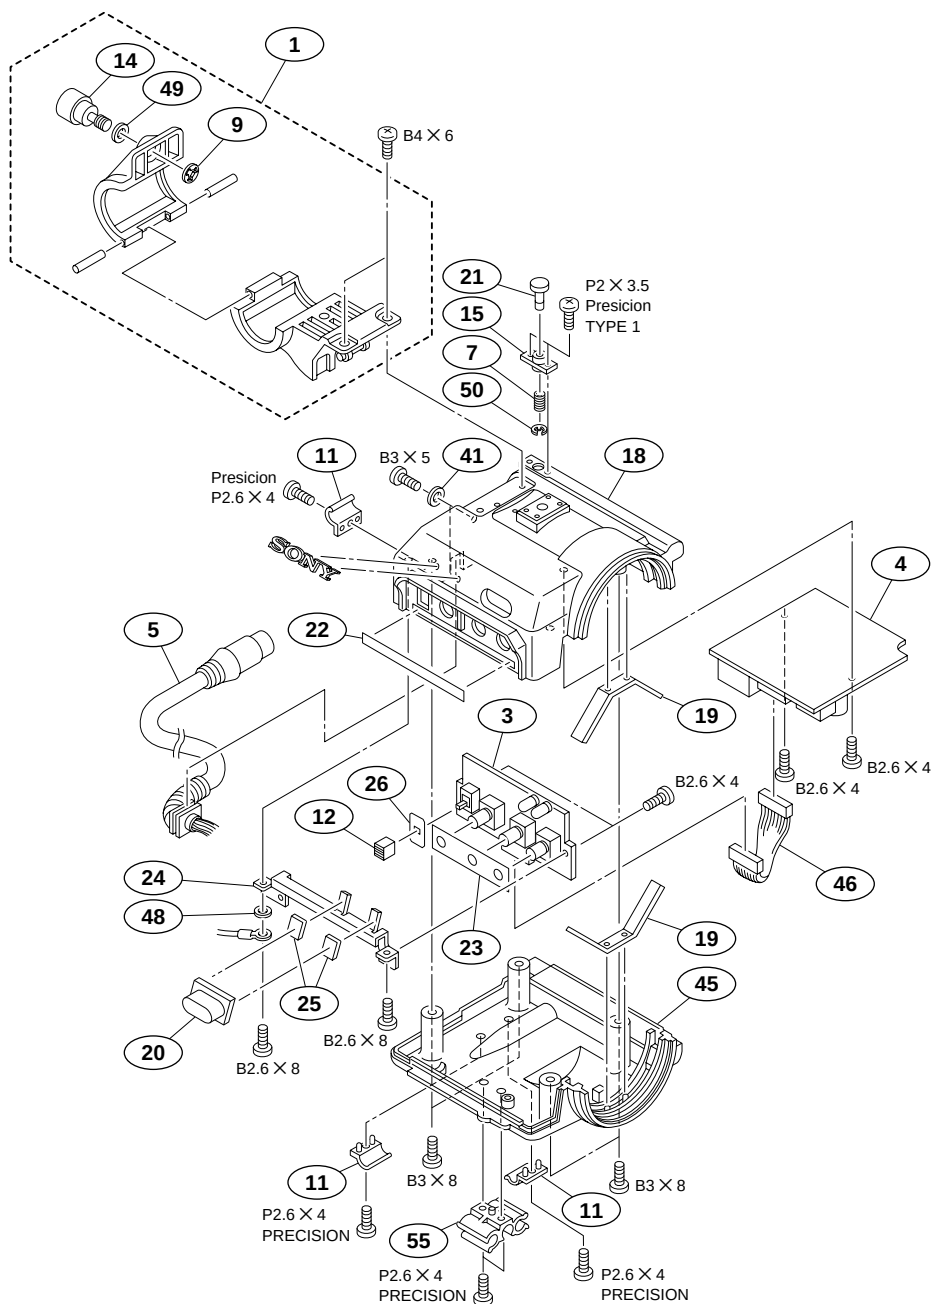

No. Part No. SP Description

1	A-8278-161-A	o HOLDER ASSY, MICROPHONE
2	△ 1-251-463-11	s CRT/DY+CONNECTOR ASSY
3	1-589-907-11	o MOUNTED CIRCUIT BOARD, "SUB"
4	△ 1-589-908-11	o MOUNTED CIRCUIT BOARD, "MAIN"
		(for DXF-701)
	△ 1-589-908-21	o MOUNTED CIRCUIT BOARD, "MAIN"
		(for DXF-701CE)
	△ 1-589-908-31	o MOUNTED CIRCUIT BOARD, "MAIN"
		(for DXF-701WS)
	△ 1-589-908-41	o MOUNTED CIRCUIT BOARD, "MAIN"
		(for DXF-701WSCE)
5	1-777-522-11	o CABLE, VF
6	2-249-361-00	o PIN, PARALLEL
7	2-277-466-01	s SPRING, COMPRESSION
8	2-362-365-00	s FOOT, RUBBER
9	3-165-904-01	s WASHER, SCREW STOPPER
10	3-176-022-03	o SPACER(B), MASK
11	3-678-684-01	s HOLDER, CABLE
12	3-680-605-00	o CAP, SLIDE
13	3-686-264-02	s EYECAP(3)

No. Part No. SP Description

14	3-686-276-01	o SCREW, M5
15	3-710-008-02	s HOUSING, STOPPER
17	9-933-305-01	o PLATE, SPREAD
18	9-933-325-01	o CASE, TOP
19	9-933-326-01	o SPRING, PLATE
20	9-933-327-01	o COVER TALLY
21	9-933-328-01	s KNOB, STOPPER
22	9-933-329-01	o LABEL, SWITCH
23	9-933-330-01	o PLATE, PARTING
24	9-933-331-01	o STAY, BOARD
25	9-933-332-01	s MOLT
26	9-933-333-01	o PLATE, PARTING
27	9-933-335-01	s HOLDER T, OUTSIDE
28	9-933-336-01	s MOLT(2)
29	9-933-337-01	o SPRING(1), HINGE
30	9-933-338-01	o SPRING(2), HINGE
31	9-933-339-01	o MIRROR
32	9-933-340-02	s HOLDER B, OUTSIDE