


Part Names

■ On the 360 degree camera speakerphone

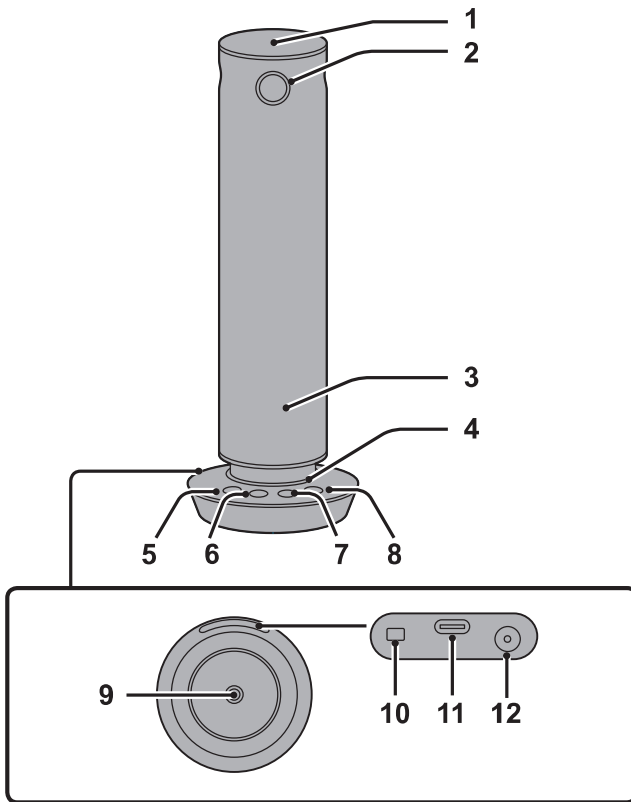

1 Microphone

Attention

- Do not block the microphone hole as this may cause a reduction in performance.

2 Cameras (4 facing 4 directions)

3 Speaker

4 Indicator

5 Audio muting button

6 Speaker volume [–] button

7 Speaker volume [+] button

8 [Mode] button

9 Camera mounting screw hole (screw: 1/4-20UNC)

Used when mounting on a tripod, etc.

10 Security slot

You can connect a security cable that is compatible with Noble Wedge slots with mounting surfaces of 11 mm ϕ or less.

11 USB-C terminal

Outputs video and audio to the PC. It also receives power supplied from the Type-C interface of the Listed PC (5 V/3 A).

12 Power input terminal

Connect the AC adaptor.